
Avermectins Plate, Detailed ELISA Procedure


1. Addition of Enzyme Conjugate

Add 50 uL of the Avermectins enzyme conjugate to the individual wells successively using a multi-channel pipette or a stepping pipette.

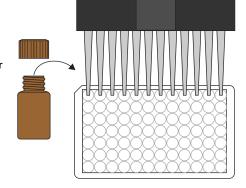


5. Addition of Substrate/Color Solution

Add 100 uL of substrate/color solution to the individual wells successively using a multichannel pipette or a stepping pipette. Cover the wells with parafilm or tape and mix the contents by moving the strip holder in a rapid circular motion on the benchtop. Be careful not to spill contents. Incubate the strips for 30 minutes at room temperature away from direct sunlight.

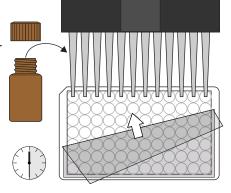


2. Addition of Standards, Samples

Add 50 uL of the standard solutions, samples or sample extracts into the wells of the test strips according to the working scheme given. We recommend using duplicates or triplicates.

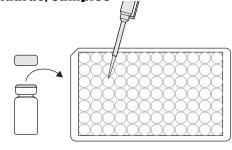


6. Addition of Stopping Solution

Add 100 uL of stop solution to the wells, in the same sequence as for the substrate solution, using a multi-channel pipette or a stepping

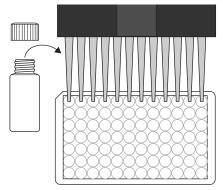


3. Addition of Antibody Solution

Add 50 uL of the Avermectins antibody solution to the individual wells successively using a multi-channel pipette. Cover the wells with parafilm or tape and mix the contents by moving the strip holder in a rapid circular motion on the benchtop. Be careful not to spill contents. Incubate the strips for 60 minutes at room temperature.

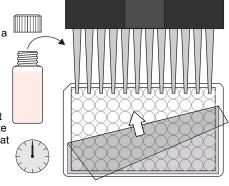


7. Measurement of Color

Read the absorbance at 450 nm using a microplate ELISA reader within 15 minutes. Calculate results.

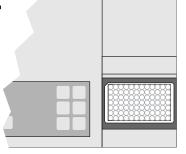

4. Washing of Plates

After incubation, remove the covering and vigorously shake the contents of the wells into a sink. Wash the strips four times with a multi-channel pipette or wash bottle using tap water. Please use at least 250 uL of washing buffer for each well and each washing step. Remaining buffer in the wells should be removed by patting the plate dry on a stack of paper towels.

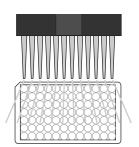

For Ordering or Technical Assistance Contact: ABRAXIS, LLC 54 Steamwhistle Drive, Warminster, PA 18974


Phone: 215-357-3911 Fax: 215-357-5232 www.abraxiskits.com



Avermectins Plate, Concise ELISA Procedure


1. Addition of Enzyme Conjugate

Add 50 uL of enzyme conjugate.

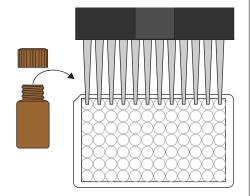


5. Addition of Substrate/Color Solution

Add 100 uL of substrate/color solution. Cover and mix for 30 seconds by moving strip holder in a circular motion on benchtop. Incubate 30 minutes at room temperature away from direct sunlight.

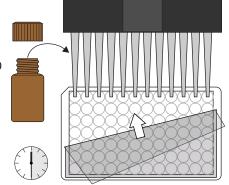


2. Addition of Standards, Samples

Add 50 uL of standard solutions, sample or sample extract.

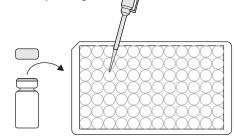


6. Addition of Stopping Solution

Add 100 uL of stop solution.

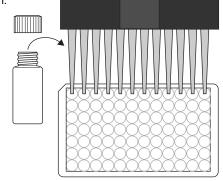


3. Addition of Antibody Solution

Add 50 uL of the antibody solution. Cover and mix for 30 seconds by moving strip holder in a circular motion on benchtop. Incubate for 60 minutes at room temperature.

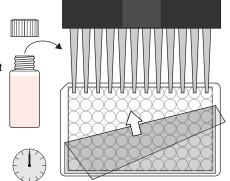


7. Measurement of Color

Measure color at 450 nm within 15 minutes. Calculate results.

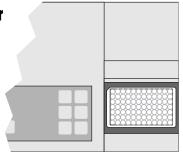

4. Washing of Plates

Wash the wells four times with 250 uL of tap water.

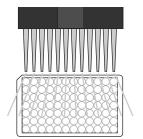

For Ordering or Technical Assistance Contact: ABRAXIS, LLC

54 Steamwhistle Drive, Warminster, PA 18974 Phone: 215-357-3911 Fax: 215-357-5232 www.abraxiskits.com